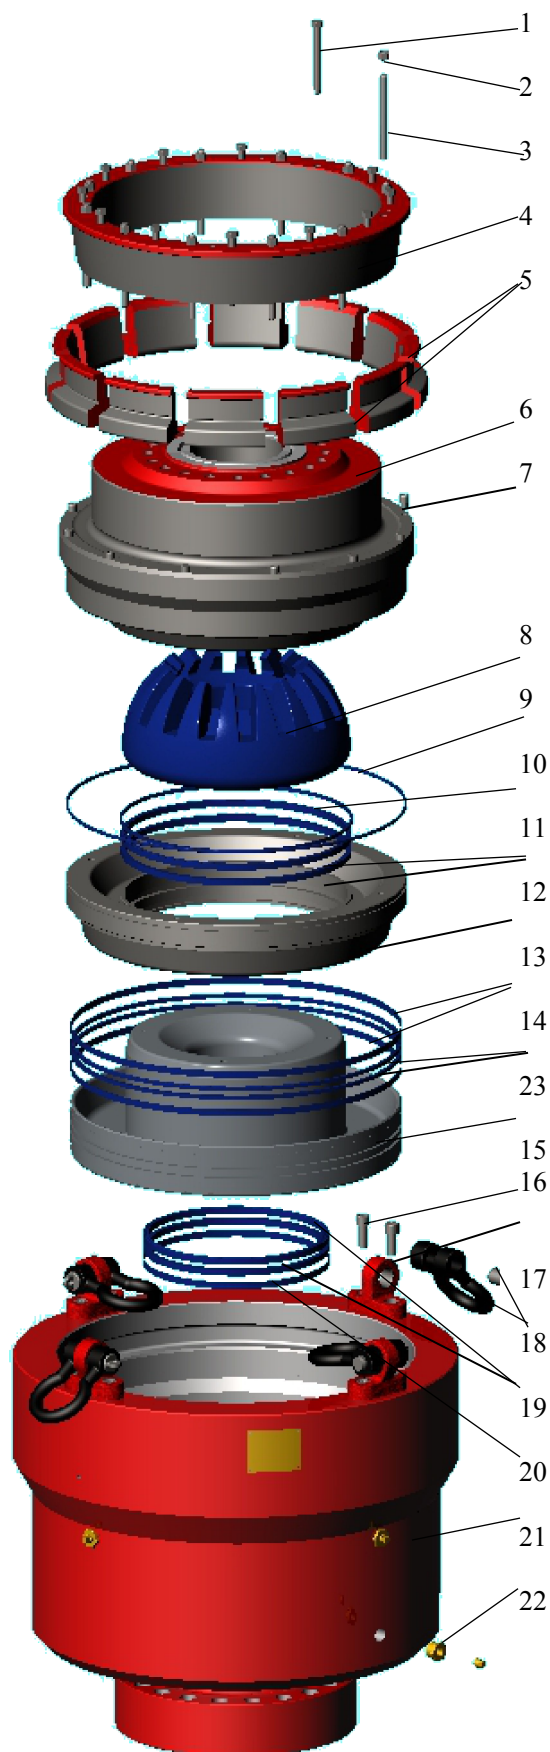


Figure 9 Exploded View of Annular BOP (Spherical Packer)

Table 2 Annular BOP Parts List (Spherical Packer)

No.	Description	Qty	Model				
			FH18-35	FH28-35	FH28-35/70	FH35-35	FH35-35/70
1	Shell	1	FH1835-02	FH2835.03-00	FH2835/70.01-00	FH3535.04-00	FW1305-17
2	Bonnet	1	FH1835-03	FH2835-05	FH2835-05	FH3535-03A	FW1305-05A
3	Piston	1	FH1835-18	FH2835-14	FH2835-14	FW1305-12A	FW1305-12A
4	Adapter Ring	1	FH1835-10	FH2835-14	FH2835-11	FW1305-10A	FW1305-10A
5	Packer	1	FH1835-06-00	FH2835-11	FH2835.09-00	FW1305.06-00A	FW1305.06-00A
6	Stud	24	FH1835-08	FH2835.09-00	FH2835-04	FW1305-04	FW1305-04
7	Cap Nut	24	FH1835-07	FH2835-04	FH2835-07	FW1305-03	FW1305-03
8	Seal-piston I.D.	2	FH1835-14 FH1835-15	FH2835-18 FH2835-19	FH2835-18 FH2835-19	FW1305.13-00	FW-1305.13-00
9	Wear Ring	1 set	FH1835-16	FH2835-23	FH2835-23	FW1305-14	FW1305-14
10	Seal-Piston O.D.	2	FH1835-19 FH1835-20	FH2835-20 FH2835-21	FH2835-20 FH2835-21	FW1305.16-00	FW1305.16-00
11	Seal-Adapter Ring I.D.	2	FH1835-12 FH1835-13	FH2835-15 FH2835-16	FH2835-15 FH2835-16	FW1305.11-00	FW1305.11-00
12	“O” Seal-ring	1	FH1835-11	FH2835-12	FH2835-12	FW1305-09	FW1305-09
13	“O” Seal-ring	1	FH1835-09	FH2835-10	FH2835-10	FW1305-07	FW1305-07
14	Wear Ring	2 set	FH1835-17	FH2835-17	FH2835-17	FW1305-15	FW1305-15
15	Joint	2	--	FH2835-13	FH2835-13	--	--
16	Z1"Pipe Plug	2	FH2835-22	FH2835-22	FH2835-22	FH2835-22	FH2835-22
17	Screw off	4		Screw off 6.8	Screw off 6.8	Screw off 9	Screw off 9
18	“O” Seal-ring	24	--	--	--	85×5.7	85×5.7
19	“O” Seal-ring	1	--	--	--	FW1305-08	FW1305-08

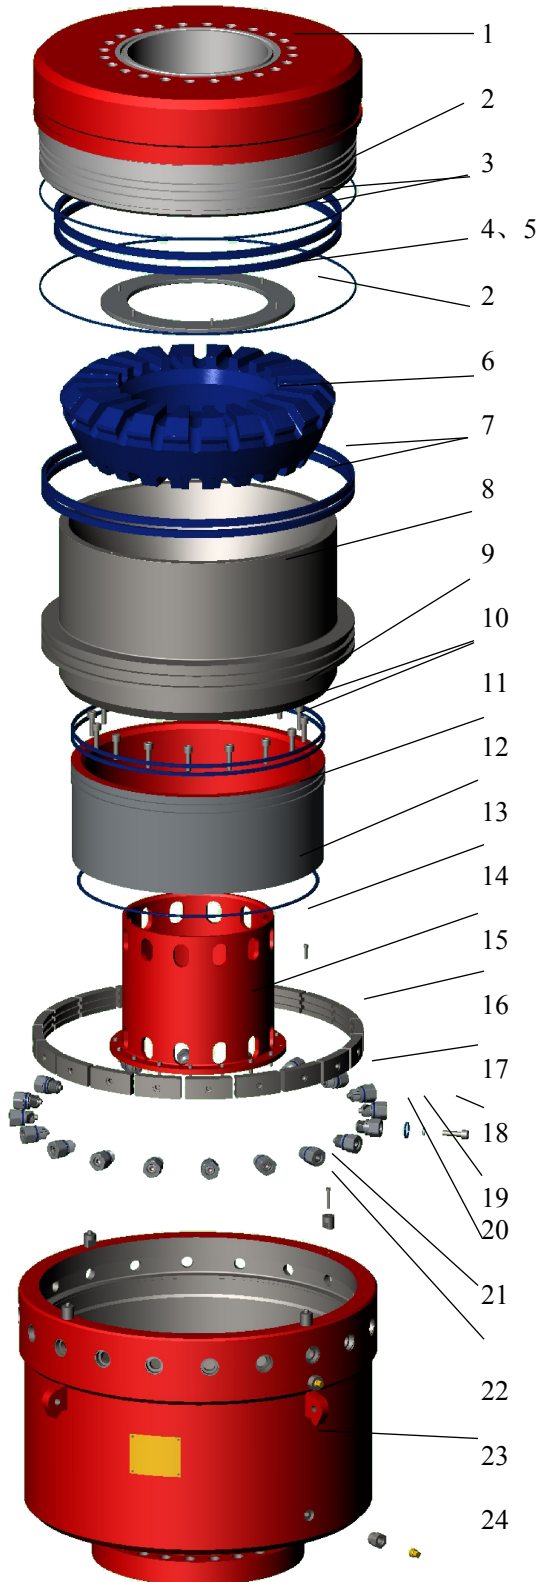


**Table 3 Type FH35-70/105
Annular BOP Parts List**

No	Description	Qty	Code
1	Disassembly Screw	12	FH3570-19
2	Nut	12	FH3570-03
3	Stud	12	FH3570-02
4	Clamp Ring	1	FH3570-01
5	Wedge	12	FH3570-05
6	Bonnet	1	FH3570-06
7	Screw M12×30	12	GB70-76
8	Packing unit	1	FH3570-07
9	Combine sealing ring	1	FH3570-09
10	“O” Seal ring	1	FH3570-08
11	Combine sealing ring	2	FH3570-11-0
12	Mud-guard ring	1	FH3570-10
13	Wear ring	2	FH3570-15
14	Combine sealing ring	2	FH3570-14-0
15	Screw M36×80	8	(12.9 class)
16	Hanger	4	FH3570-04
17	Screw off	4	JB8112-1999
18	Combine sealing ring	2	FH3570-12-0
19	Wear ring	1	FH3570-16
20	Shell	1	FH3570-18
21	Joint	4	FH3570-13
22	Oil plug	4	F02-15
23	Piston	1	FH3570-17

Figure 10 Type FH35-70/105
Exploded View of Annular BOP

Table 4 Type FHZ54-14
Annular BOP Parts List



No	Description	Qty	Code
1	Bonnet	1	FHZ5414-03
2	“O” Seal ring	2	FHZ5414-09
3	Seal ring	2	FHZ5414-08
4	Wear plate	1	FHZ5414-01
5	Stud M12×35	6	GB5783-86
6	Packing unit	1	FHZ5414-02-00
7	Seal ring	2	FHZ5414-15
8	Piston	1	FHZ5414-13
9	Stud M20×80	16	GB70-85
10	Seal ring	2	FHZ5414-12
11	Outside sleeve	1	FHZ5414-14
12	“O” Seal ring	1	FHZ5414-17
13	Stud M12×45	16	GB70-85
14	Inside sleeve	1	FHZ5414-16
15	Jaw	20	FHZ5414-05
16	Jaw screw	20	FHZ5414-06
17	Supporting screw	20	FHZ5414-07
18	“O” Seal ring 25×2.65	20	GB3452-1-82
19	“O” Seal ring 53×5.3	20	GB3452-1-82
20	Stud M12×70	4	GB70-85
21	Bonnet grip head	4	FHZ5414-04
22	Shell	1	FHZ5414-11-0
23	Oil plug	2	F02-15
24	Adapter	2	FHZ5414-10